Important

Use Qualified Service Personnel to Install this KIT
The Mounting of the Kit has changed for the Min-R Mammography Processor

Additional instructions for installing a ML2000P Processor Ready Kit to the Min-R Mammography Processor

The original K1 Relay Position is vacant on the Min-R Mammography Processor. The Relay has been re-located inside the Electrical Box

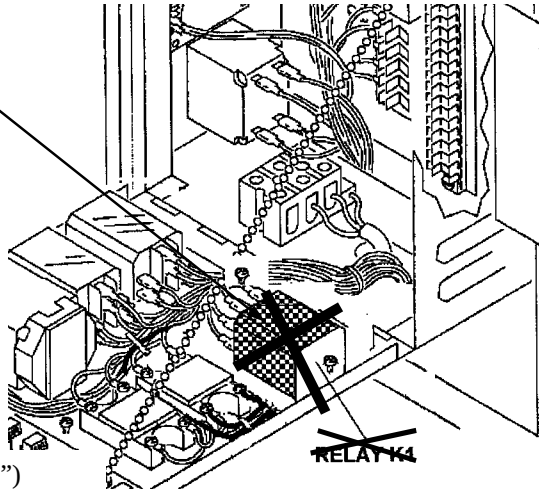

Figure 1

Assemble the Ready Kit Bracket using the existing Mounting Panel Nuts on the Drop Down Panel of the Electrical Box, ("E" Box) as shown in Figure 2, using the provided Screws and Washers.

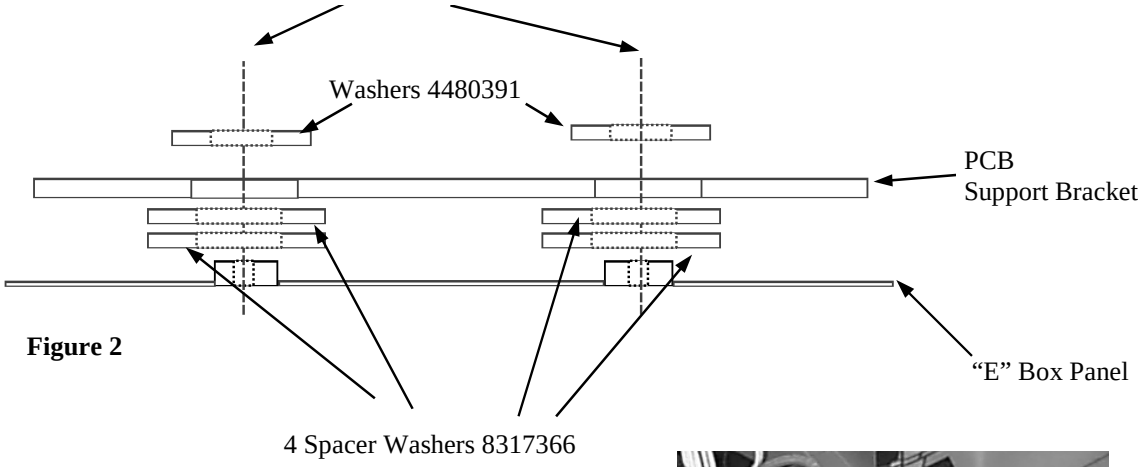

Figure 2

Picture (Figure 3) showing assembled Ready Kit PCB and Mounting Hardware

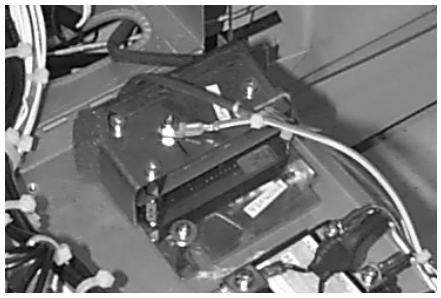

Figure 3

Fit EXTRA WASHER under Cable Clamp

NOTE: This is to prevent the CABLE BEING DAMAGED by the sharp end of the SCREW

Excerpt from READY KIT
(Figure 1 – 6) Install Instructions II 3477-G
Showing Mounting of Harness

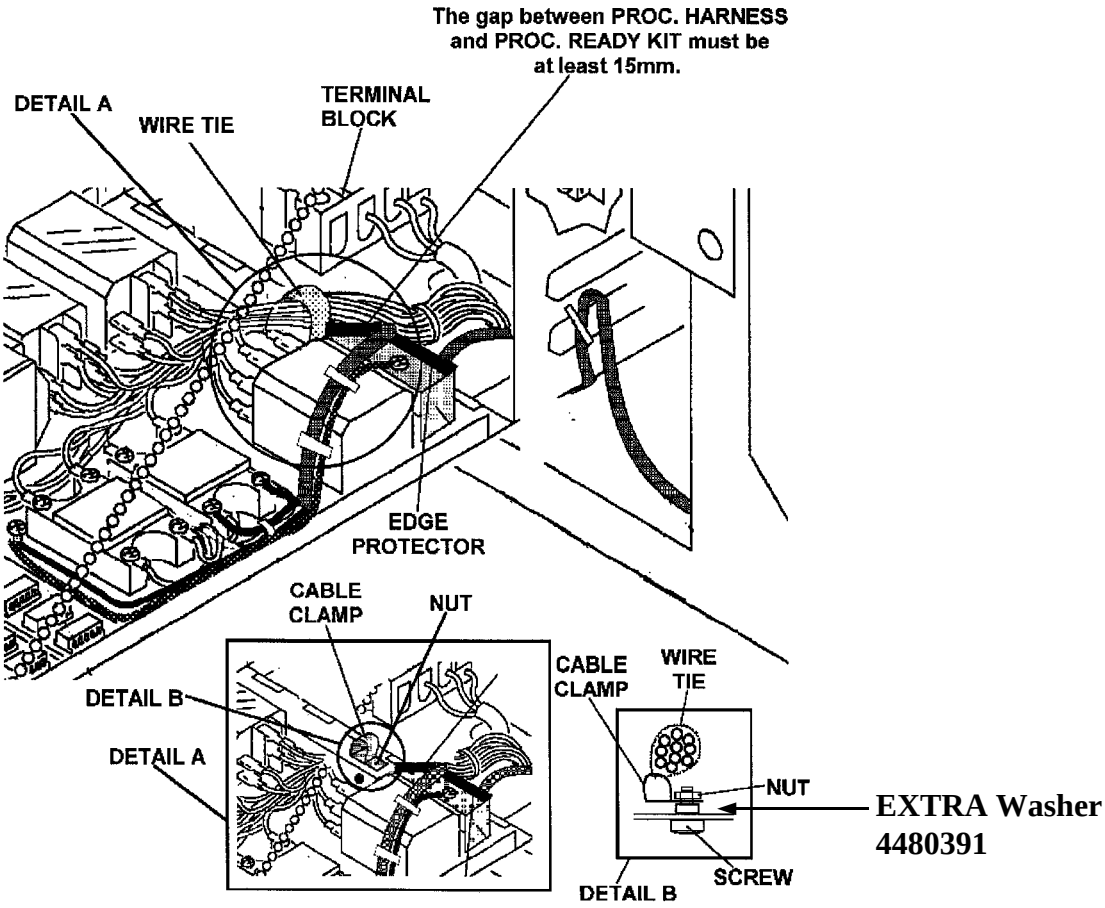

Figure 4

PLEASE NOTE

The information contained herein is based on the experience and knowledge relating to the subject matter gained by Kodak prior to publication.

No patent license is granted by this information.

Kodak reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

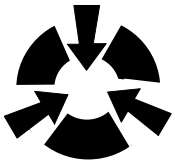

NOTE
This equipment includes parts and assemblies sensitive to damage from electrostatic discharge.
Use caution to prevent damage during all service procedures.

HEALTH IMAGING DIVISION